



# CANBUILT MFG.

Toll-Free in Canada: 1-888-607-2926 Phone: 416-749-6555 Fax: 416-749-7597  
 Email: sales@canbuilt.com Website: www.canbuilt.com

103 Milvan Drive,  
 Toronto, Ontario,  
 Canada, M9L 1Z7

## MULTIFUNCTIONAL LIFTING SYSTEM

### Canbuilt Arm

 
Base Configuration

**Model # 5200**

**Capacity up to 1500 Lbs**

- The Lift System can be dressed with options and setup to perform a wide variety of lift applications
- Flow through base allows legs to be telescoped backwards
- Dual Control: Air/Manual Hydraulics with upgraded lever release for absolute hydraulic control

Boom Position	Capacity
1 Fully Retracted	1500 Lbs
2 Mid Extension	800 Lbs
3 Max Extension	600 Lbs

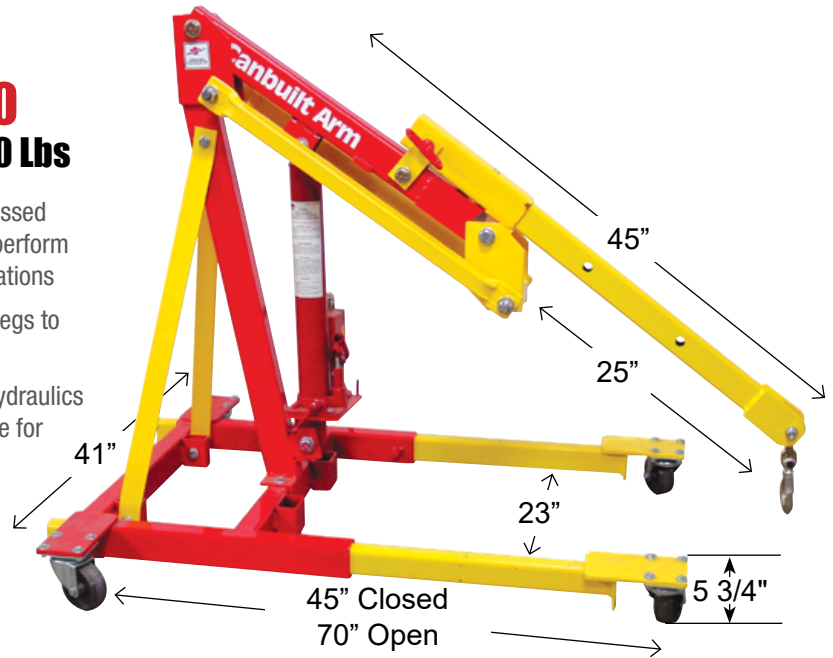


### Articulating Leveling Platform Model # 5250




### Quick change FLIP-OVER Tool holder

 
Using the FLIP-OVER TOOL HOLDER, change from Standard Crane to Power Arm or to Horizontal Lift.

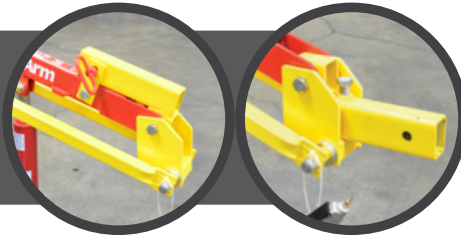

Boom Position	Capacity
1 Max. Extension	800 Lbs

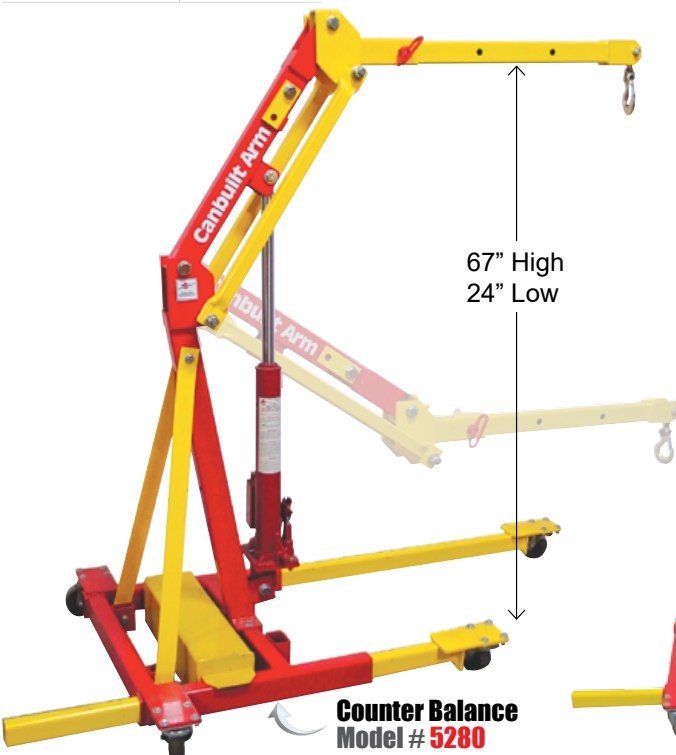 


### Counter Balance Model # 5280

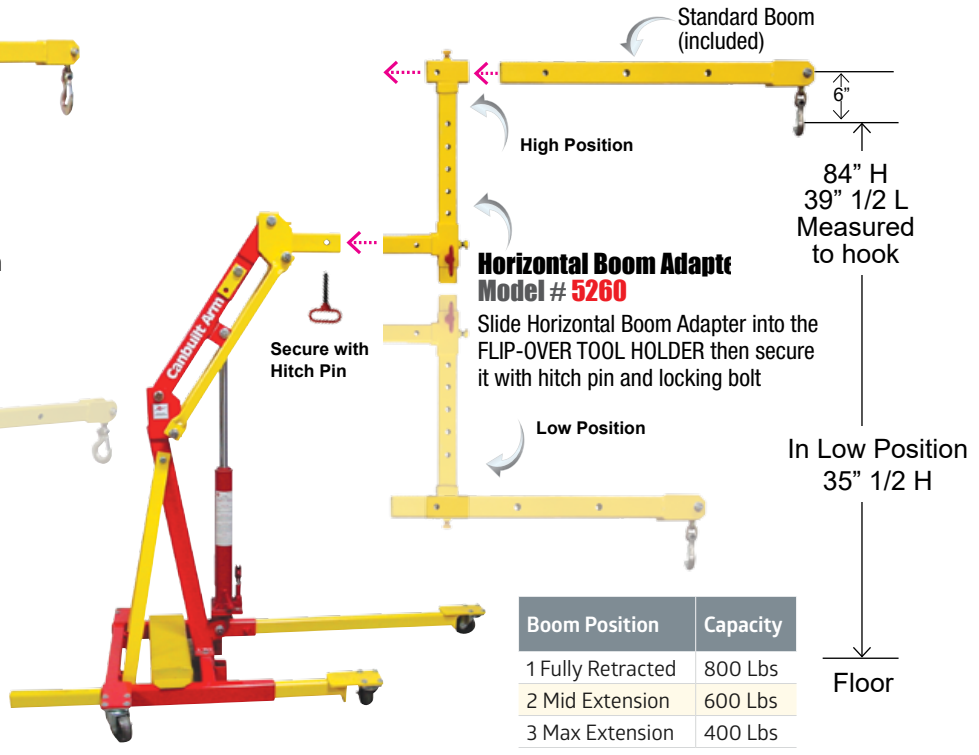 

Boom Position	Capacity
1 Fully Retracted	800 Lbs
2 Mid Extension	600 Lbs
3 Max Extension	400 Lbs


Floor

# OPTIONAL ADAPTERS FOR 5200 LIFTING SYSTEM

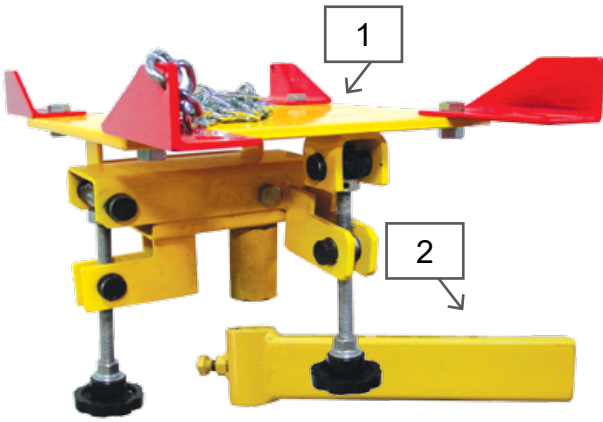 

## 2 Piece Articulating Leveling Platform for 5200 Model # 5250

 1. Articulating Leveling Platform
  2. Adapter for Flip-Over-Tool
- Fully articulated manipulator platform designed for one handed side to side, fore / aft tilt adjustments
  - Complete with corner adjustable brackets, tie down chain and hardware to secure the load

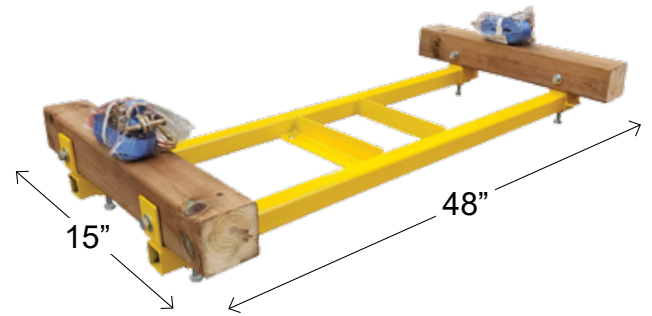

## Trans axle, Gas tank Adapter Model # LS-1000

- Bolts up to transmission plate
- Includes ratcheting tie down straps
- 48" L x 15" W
- Adjustment, slide per side 14 1/2"

 
This adapter works in conjunction with the Articulating Leveling Platform **Model # 5250**

Shown Base Model # 5200 Lifting System with optionals: Horizontal Boom Adapter, Counterbalance and Skid Spreader



## 100lbs Counter Balance Model # 5280

Counterbalance provides the ability to lift when the lift point is extended past the front wheels. Apply on base or the back of legs as shown below. Multiple counterbalance units can be used as needed

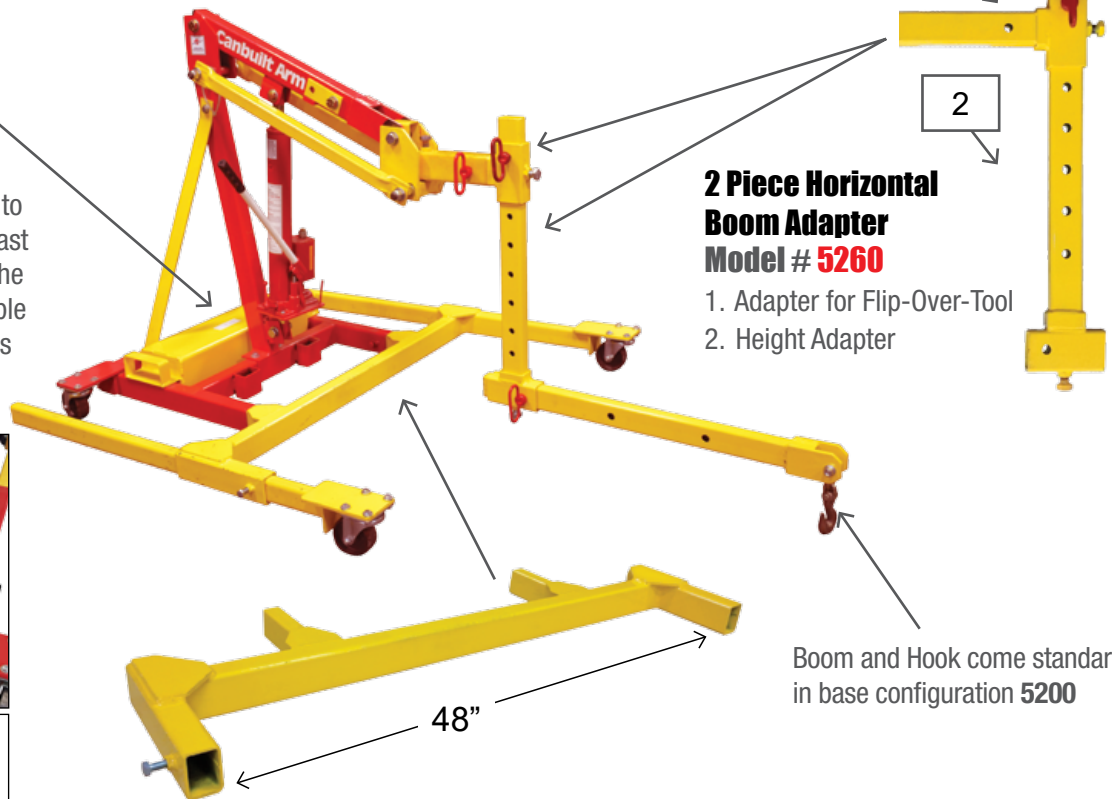

## 2 Piece Horizontal Boom Adapter Model # 5260

1. Adapter for Flip-Over-Tool
2. Height Adapter

Boom and Hook come standard in base configuration 5200

## Skid Spreader Model # 3200SSL

- Skid spreader reduces all capacity by 20%
- Increases stability